

## General Information

There are two versions of the Public Rescue Tube (PRT): the beach version and the harbour version. The difference is in the accessories. The harbour version also contains a bag with 15m throw line and an optional weight.

- The upper edge of the Public Rescue Tube (PRT) with the activation handle should not be placed higher than 1.70m so that even smaller persons can open it easily.
- Especially for the harbour version it is important to attach the Public Rescue Tube (PRT) under or near a light source to ensure the visibility in the dark. In addition, two supplied reflective strips (self-adhesive) may be glued to either side of the bag.
- The ISO symbol is attached to the Public Rescue Tube (PRT). Optionally, a large sign (40x40cm) or 3 signs for better all-round recognition can be attached to a pole above the Public Rescue Tube (PRT).



*ISO sign for rescue equipment*



*mounting option on a pole at the beach*

### Mounting:

- The Public Rescue Tube (PRT) is to be mounted on a solid background, such as a wall or a pole.



The Public Rescue Tube (PRT) may be fixed with plastic straps or a clip here.

The Public Rescue Tube (PRT) may be mounted with screws on shims here.

### Sealing:

- To secure the Public Rescue Tube (PRT) again after use, the strap / activation handle is sealed at its top with a thread knot through the two eyelets.
- A standard sewing thread, such as a cotton thread with a thickness of 20, which is not tear-resistant should be used for sealing (Caution: do not use tear-resistant yarn or wire!)



*sealed with a double knot*



*cotton thread thickness of 20*



### Weight bag accessories:

- Weight can be added by filling the bag with sand.
- The bag can be filled with up to 450 g of sand.
- If necessary, the throwing weight can be attached to end of the PRT in order to increase the throwing distance (please see instructions beach / harbour version).